


# Regular Slotted Container – RSC

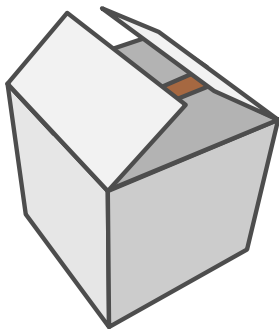

## How to measure an RSC


An RSC has manufacturing tolerances automatically added to the specified internal dimensions. These tolerances make allowance for the board thickness when the RSC is folded and erected and differ, depending on flute type.

**Remember to remove these tolerances when converting to ID's.**

## Step 1

### Open the RSC along the glue flap

Measure from the inside and from the centre of the crease.

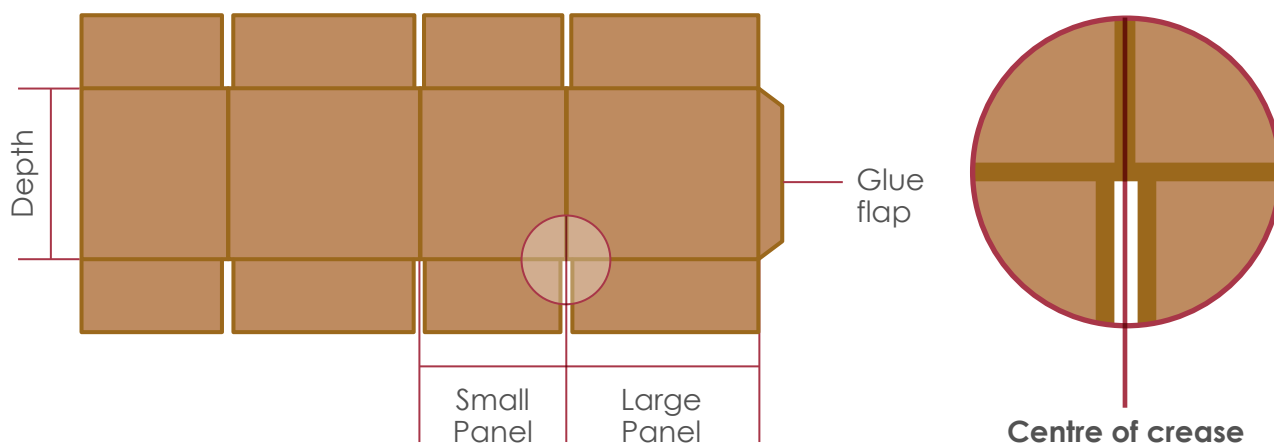

## Step 2

### Get the panels right

1. Large panel = Length
2. Small panel = width
3. Depth = Height

**L x W x D**

